



Power (Green) Turns unit on/off



Advanced (Black) Use in combination with other buttons to perform advanced tasks.



Find (Red) Displays crosshairs and zooms out to help aim the camera



Flip (Light Blue) Cycles through four different picture orientations



Color Mode (Blue) Cycles through different color modes



Brightness (Yellow) Changes screen brightness



Zoom (Black) (1) Zooms camera when Auto Focus is on (2) Adjusts manual focus when Auto Focus is off



Freeze Frame (Red) (1) Freezes current image displayed on the screen (2) Hold approximately six seconds to enter/exit Review mode



Focus Lock (Orange) (1) Turns Auto Focus on/off (2) Adjusts manual focus when Auto Focus is off



Reference Lines (White and Black) Displays two horizontal/vertical reference lines



Mask (Black and White) Displays shades or masks to cover parts of the screen



Width (White) (1) Changes spacing between reference lines, shades, or masks (2) Scrolls through saved images when in Review mode



Up and Down (Black) Moves reference lines, shades, or masks on the screen



Advanced + Power Hold approximately six seconds to enter/exit Configuration mode



Advanced + Freeze Frame (1) Saves current image to an SD Card (2) Starts/stops slide show when in Review mode



Advanced + Find Deletes current image when in Review mode