



Power (Green)
Powers unit on and off



Advanced (Black)
Use in combination with other buttons to perform advanced tasks. Always press and hold this button first, and then press another button to perform the task.



Find (Red)
Displays crosshairs and zooms out to help aim the camera



Flip (Light Blue)
Cycles through four different picture orientations



Color Mode (Blue)
Cycles through different color modes



Brightness (Yellow)
Changes screen brightness



Zoom (Black)
(1) Zooms camera view in and out when Auto Focus is on (2) Adjusts manual focus when Auto Focus is off



Freeze Frame (Red)
Freezes the current image displayed on the screen



Focus Lock (Orange)
Turns Auto Focus on and off



Reference Lines (White and Black)
Displays two horizontal or vertical reference lines



Illumination (Black and White)
Turns LED lights on and off



Width (White)
Changes spacing between reference lines



Up and Down (Black) (1) Moves reference lines when lines are displayed (2) Adjusts brightness when LED lights are on



Advanced + Power
Hold for approximately six seconds to enter or exit Configuration mode. While in this mode, you can add, remove, or reset color modes.